


GTI S1-06 Anchorages

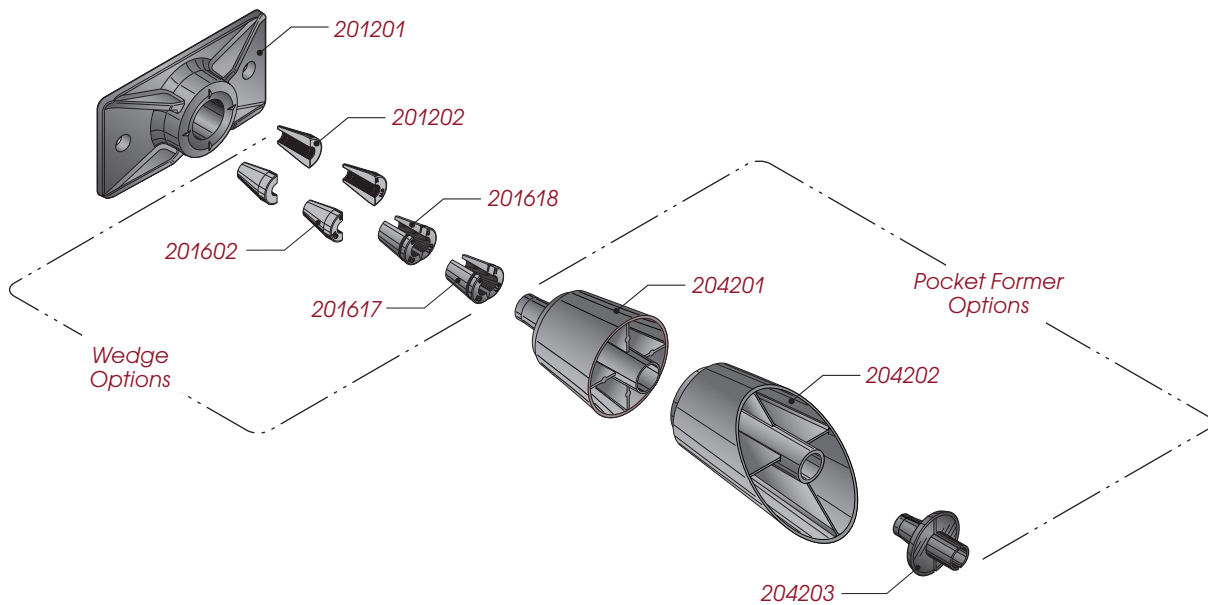

GTI S1-06 ANCHORAGE	
201251	GTI S1-06 ANCHORAGE SET
	201201 ANCHOR, GTI S1-06
FOR WEDGE PART NUMBER SEE WEDGE TABLE	
GTI POCKET FORMERS	
204201	POCKET FORMER, .6"
204202	POCKET FORMER, 45 DEG., .6"
204203	INTERMEDIATE P/F/, .6"

WEDGE TABLE		
GTI Bare Anchorage Kits are sold with a variety of wedge types based on customer preference. See table below to determine/identify wedge type.		
A	201202	WEDGE, 2 PIECE, .6"
B	201602	GTI S1-06 2-PIECE WEDGE, 1.6" LONG
C	201618	GTI S1-06 2-PIECE WEDGE, W/CLIP
D	201617	GTI S1-06 2 PIECE WEDGE, W/ CLIP, SMOOTH