




GTI® 0.6" Zero Void® Bonded Intermediate Anchorage

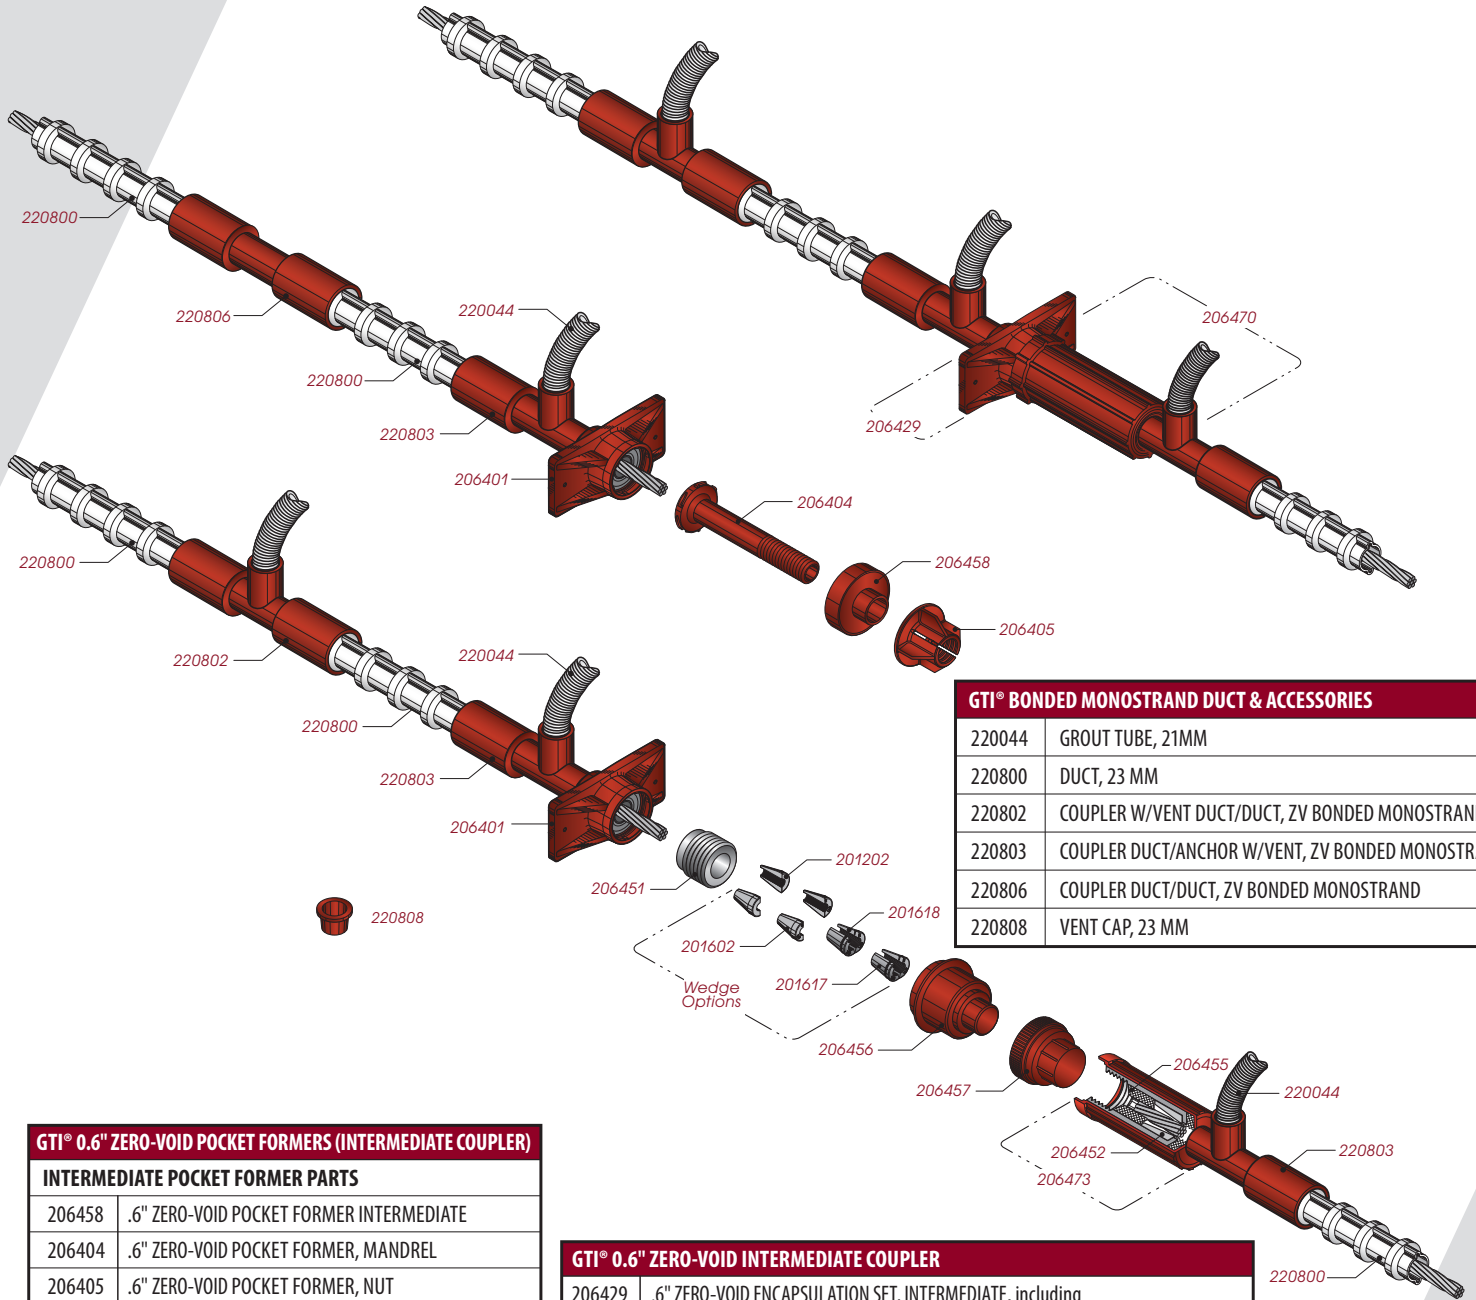

GTI® BONDED MONOSTRAND DUCT & ACCESSORIES	
220044	GROUT TUBE, 21MM
220800	DUCT, 23 MM
220802	COUPLER W/VENT DUCT/DUCT, ZV BONDED MONOSTRAND
220803	COUPLER DUCT/ANCHOR W/VENT, ZV BONDED MONOSTRAND
220806	COUPLER DUCT/DUCT, ZV BONDED MONOSTRAND
220808	VENT CAP, 23 MM

GTI® 0.6" ZERO-VOID POCKET FORMERS (INTERMEDIATE COUPLER)	
INTERMEDIATE POCKET FORMER PARTS	
206458	.6" ZERO-VOID POCKET FORMER INTERMEDIATE
206404	.6" ZERO-VOID POCKET FORMER, MANDREL
206405	.6" ZERO-VOID POCKET FORMER, NUT

WEDGE TABLE		
GTI Bare Anchorage Kits are sold with a variety of wedge types based on customer preference. See table below to determine/identify wedge type.		
A	201202	WEDGE, 2 PIECE, .6"
B	201602	GTI S1-06 2-PIECE WEDGE, 1.6" LONG
C	201618	GTI S1-06 2-PIECE WEDGE, W/CLIP
D	201617	GTI S1-06 2 PIECE WEDGE, W/ CLIP, SMOOTH

GTI® 0.6" ZERO-VOID INTERMEDIATE COUPLER	
206429	.6" ZERO-VOID ENCAPSULATION SET, INTERMEDIATE, including
206401	.6" ZERO-VOID ENCAPSULATION
FOR WEDGE PART NUMBER SEE WEDGE TABLE	
206470	.6" Z-VOID INTERMEDIATE ENCAPSULATION ASSEMBLY, ZVMB
206451	.6" ZERO-VOID BARREL ANCHOR, INTERMEDIATE, THREADED
206452	.6" ZERO-VOID BARREL ANCHOR, INTERMEDIATE
206455	SPACER, INTERMEDIATE .6" ZERO-VOID INTERNAL VOID SPACER, FRONT
206456	.6" ZERO-VOID CAP, INTERMEDIATE STRESSING
206457	.6" ZERO-VOID CAP, INTERMEDIATE FIXED