




GTI® 0.6" Zero Void® Bonded Stressing-End Threaded Metal Ring

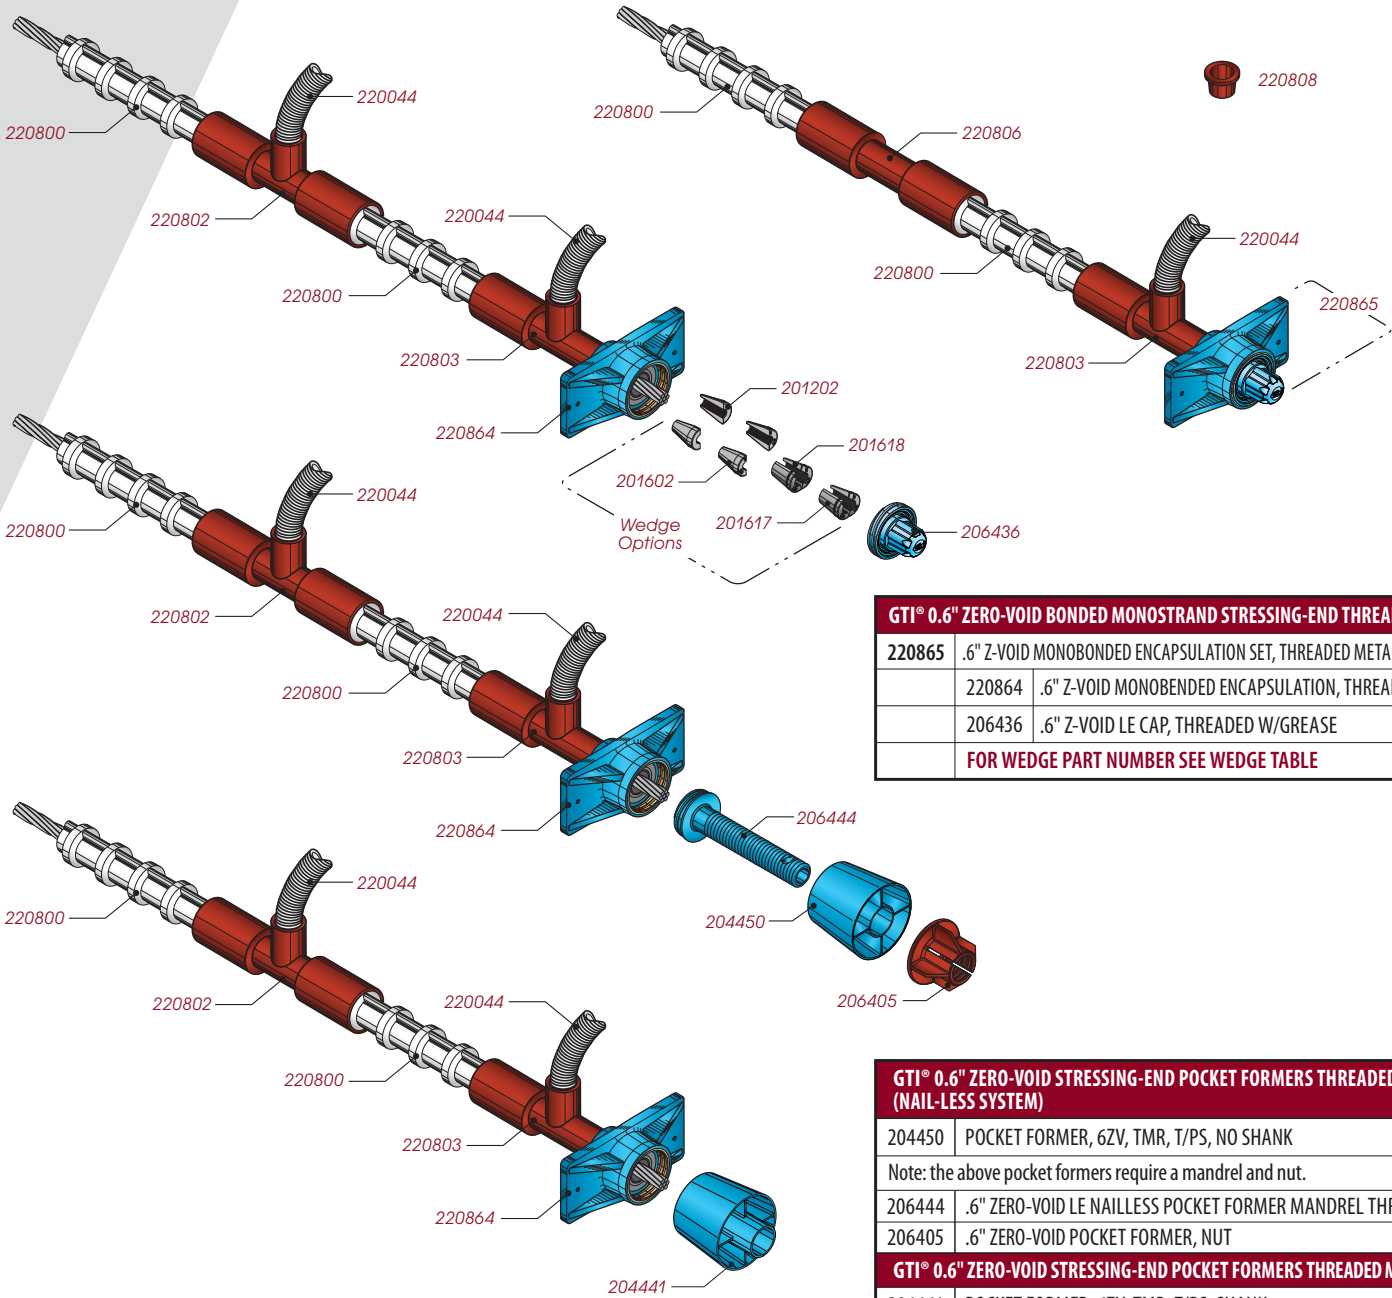

GTI® 0.6" ZERO-VOID BONDED MONOSTRAND STRESSING-END THREADED METAL RING	
220865	.6" Z-VOID MONOBONDED ENCAPSULATION SET, THREADED METAL RING, Including
220864	.6" Z-VOID MONOBONDED ENCAPSULATION, THREADED METAL RING
206436	.6" Z-VOID LE CAP, THREADED W/GREASE
FOR WEDGE PART NUMBER SEE WEDGE TABLE	

GTI® 0.6" ZERO-VOID STRESSING-END POCKET FORMERS THREADED METAL RING (NAIL-LESS SYSTEM)	
204450	POCKET FORMER, 6ZV, TMR, T/PS, NO SHANK
Note: the above pocket formers require a mandrel and nut.	
206444	.6" ZERO-VOID LE NAILLESS POCKET FORMER MANDREL THREADED
206405	.6" ZERO-VOID POCKET FORMER, NUT
GTI® 0.6" ZERO-VOID STRESSING-END POCKET FORMERS THREADED METAL RING	
204441	POCKET FORMER, 6ZV, TMR, T/PS, SHANK

WEDGE TABLE	
GTI® Zero Void Anchorage Kits are sold with a variety of wedge types based on customer preference. See table below to determine/identify wedge type.	
A	201202 WEDGE, 2 PIECE, .6"
B	201602 GTI S1-06 2-PIECE WEDGE, 1.6" LONG
C	201618 GTI S1-06 2-PIECE WEDGE, W/CLIP
D	201617 GTI S1-06 2-PIECE WEDGE, W/CLIP, SMOOTH

GTI® BONDED MONOSTRAND DUCT & ACCESSORIES	
220044	GROUT TUBE, 21MM
220800	DUCT, 23 MM
220802	COUPLER W/VENT DUCT/DUCT, ZV BONDED MONOSTRAND
220803	COUPLER DUCT/ANCHOR W/VENT, ZV BONDED MONOSTRAND
220806	COUPLER DUCT/DUCT, ZV BONDED MONOSTRAND
220808	VENT CAP, 23 MM