




# GTI<sup>®</sup> 0.6" Zero Void<sup>®</sup> Bonded Stressing-End System

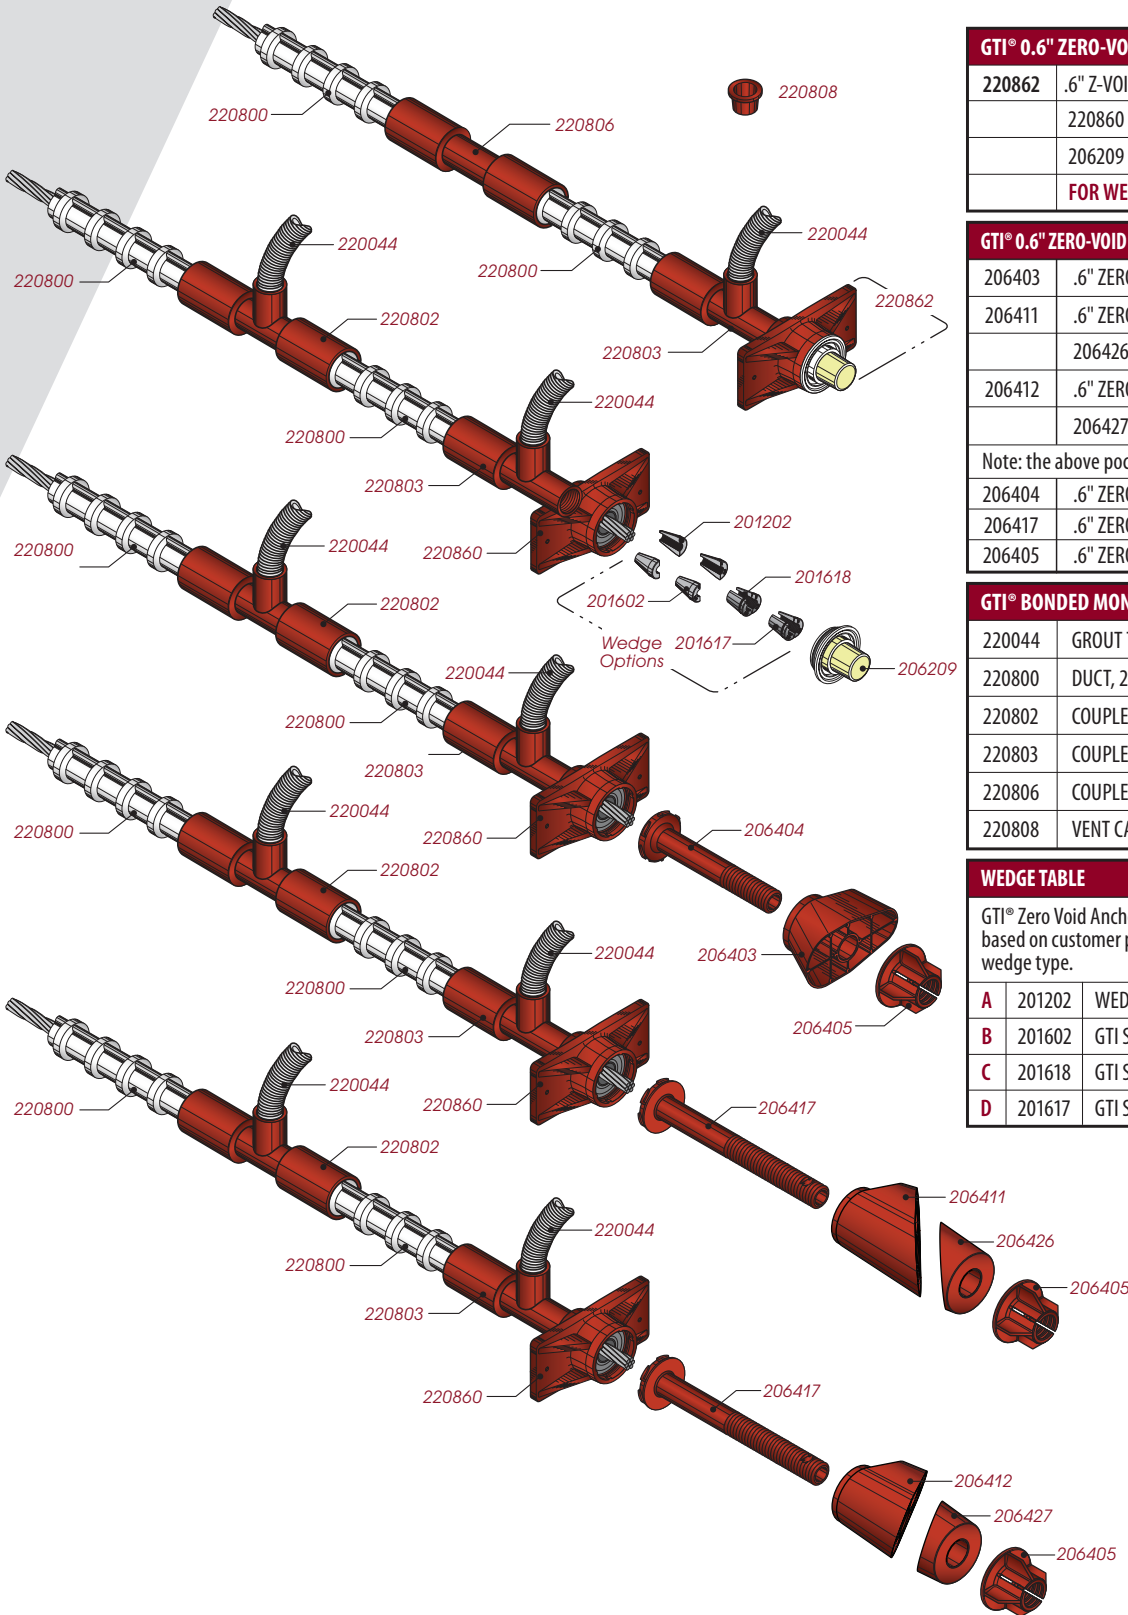

GTI <sup>®</sup> 0.6" ZERO-VOID <sup>®</sup> BONDED MONOSTRAND STRESSING-END	
220862	.6" Z-VOID MONOBONDED ENCAPSULATION SET, Including
	220860 .6" Z-VOID MONOBONDED ENCAPSULATION
	206209 .6" CAP, DE/LE,CPS,CLEAR,O-RING
FOR WEDGE PART NUMBER SEE WEDGE TABLE	

GTI <sup>®</sup> 0.6" ZERO-VOID STRESSING-END POCKET FORMERS (NAIL-LESS SYSTEM)	
206403	.6" ZERO-VOID POCKET FORMER, 2", PLASMA
206411	.6" ZERO-VOID POCKET FORMER 45°, PLASMA
	206426 .6" ZERO-VOID POCKET FORMER 45°, NUT SPACER
206412	.6" ZERO-VOID POCKET FORMER 30°, PLASMA
	206427 .6" ZERO-VOID POCKET FORMER 30°, NUT SPACER
Note: the above pocket formers require a mandrel and nut.	
206404	.6" ZERO-VOID FORMER, MANDREL
206417	.6" ZERO-VOID POCKET FORMER, MANDREL, LONG
206405	.6" ZERO-VOID POCKET FORMER, NUT

GTI <sup>®</sup> BONDED MONOSTRAND DUCT & ACCESSORIES	
220044	GROUT TUBE, 21MM
220800	DUCT, 23 MM
220802	COUPLER W/VENT DUCT/DUCT, ZV BONDED MONOSTRAND
220803	COUPLER DUCT/ANCHOR W/VENT, ZV BONDED MONOSTRAND
220806	COUPLER DUCT/DUCT, ZV BONDED MONOSTRAND
220808	VENT CAP, 23 MM

WEDGE TABLE		
GTI <sup>®</sup> Zero Void Anchorage Kits are sold with a variety of wedge types based on customer preference. See table below to determine/identify wedge type.		
A	201202	WEDGE, 2 PIECE, .6"
B	201602	GTI S1-06 2-PIECE WEDGE, 1.6" LONG
C	201618	GTI S1-06 2-PIECE WEDGE, W/CLIP
D	201617	GTI S1-06 2-PIECE WEDGE, W/CLIP, SMOOTH